


# Installation Instructions

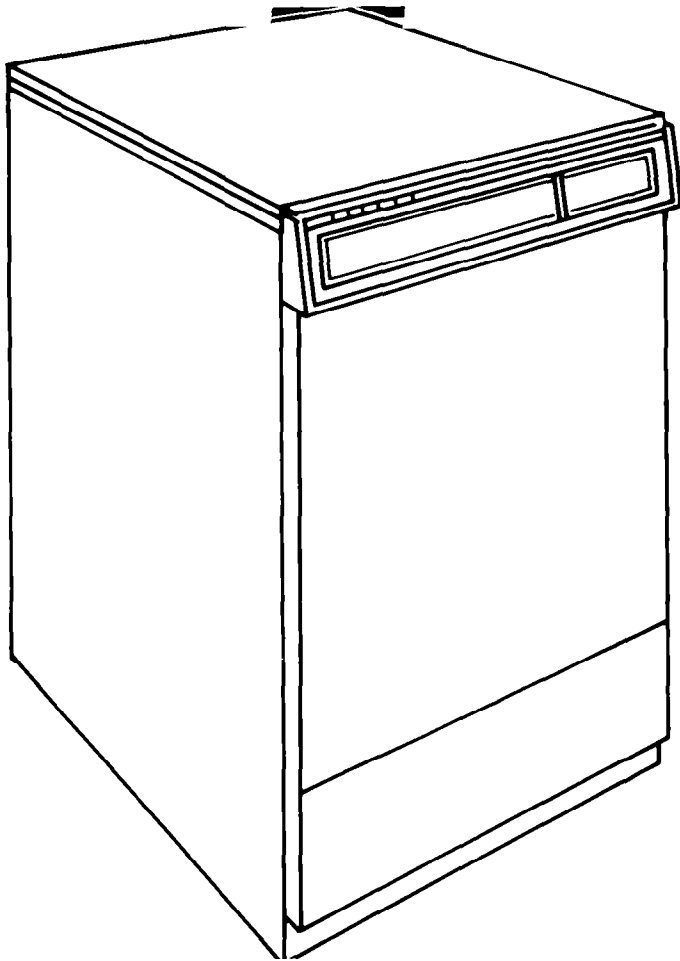

# PORTABLE DISHWASHER

1-93

Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Compactors, Room Air Conditioners, Dehumidifiers, Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens ;



# Before you start...

Check the area where you will be using your portable dishwasher. Proper installation for operation is your responsibility. Make sure you have everything necessary to insure correct operation.

**Water Heater:** Should be set to deliver 140°F water to dishwasher for best results.

**Grounded Electrical Outlet:** is required. See Electrical Requirements.

**Hot water faucet or hot and cold single-spout water faucet:** The faucet should be accessible within 4 feet of the back of the dishwasher and should provide 15-120 PSI water pressure.


**Important:** observe all governing codes and ordinances.

Remove parts and literature packages from dishwasher tub. Close and latch dishwasher door.


**Support:** The floor must be able to support the appliance weight of 180 pounds.

**Drain:** To drain your Whirlpool dishwasher, you need a sink or a laundry tub having a minimum carry-away capacity of 7 gallons per minute. The top of the sink or laundry tub cannot be lower than 27 inches or higher than 48 inches from the bottom of the dishwasher.

## Tools needed for installation.

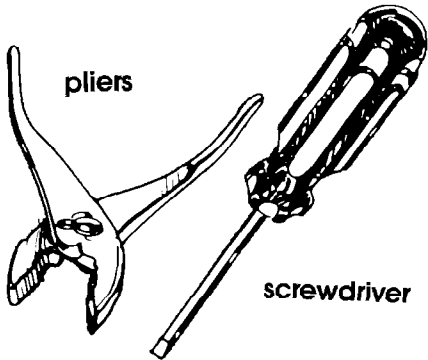

## Parts supplied for installation.

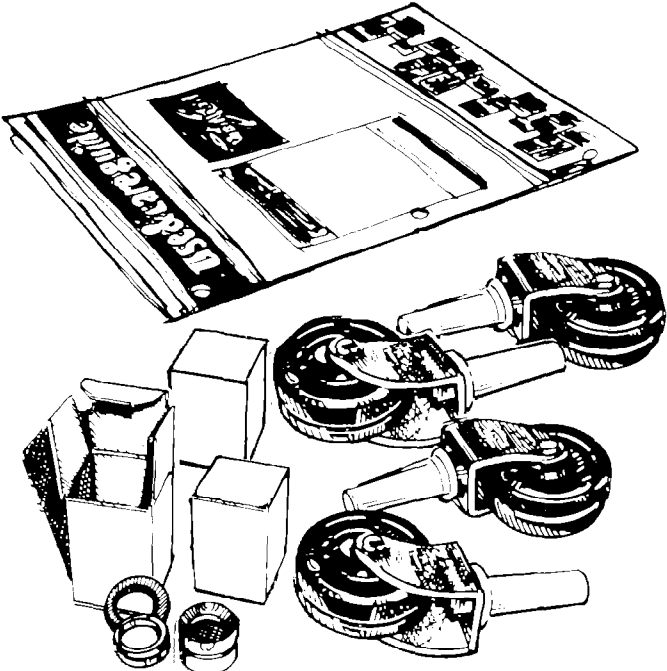

1 literature package  
3 faucet adapter kits  
4 casters

PANEL A

## Electrical requirements.

**Warning:** Improper connection of the equipment grounding conductor can result in a risk of electrical shock.

Electrical ground is required on this appliance.

A 120 Volt, 50/60 Hz, AC only 15 Ampere (20 Ampere maximum) fused electrical supply is required. (Time-delay fuse or circuit breaker is recommended.) It is recommended that a separate circuit serving only this appliance be provided.

**WARNING: AN EXTENSION CORD SHOULD NOT BE USED WITH THIS APPLIANCE. SUCH USE MAY RESULT IN A FIRE, ELECTRICAL SHOCK, OR OTHER PERSONAL INJURY.**

In areas where the recommended voltage is not available, it is necessary to install a transformer with a minimum rating of 1500 watts. The output voltage of the transformer must be 120 volts. If the transformer does not provide for an electrical ground, a separate external grounding wire must be installed in accordance with local codes and ordinances. Such a transformer can be purchased locally. See Figure 1.

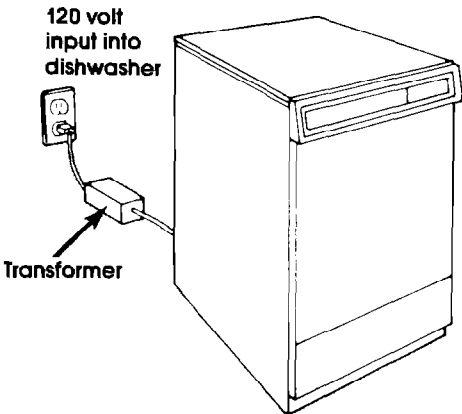


Figure 1

## Recommended grounding method.

**DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE THE POWER SUPPLY CORD GROUNDING PRONG.**

For your personal safety, this appliance must be grounded. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-prong grounding type wall receptacle, grounded in accordance with the National Electrical Code, ANSI/NFPA 70-1987 and local codes and ordinances. See Figure 2. If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have a properly grounded 3-prong wall receptacle installed by a qualified electrician.

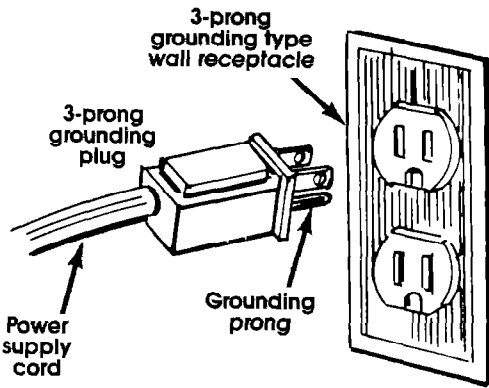


Figure 2

Now start...

1.

Take two of the foam corners from the carton and place them on the floor behind the dishwasher.

2.

Stand on the right or left side of the dishwasher. Firmly grasp the body of the dishwasher and gently lay it on its back on the foam corners. Remove the tape that holds the bottom pallet in place.

3.


Firmly push one caster into each of the holes at the corners of the dishwasher until they lock in place. Check casters. If casters are not locked into place, they may fall out when the dishwasher is moved or cause the dishwasher to vibrate during use.

4.

Now stand the dishwasher back up.

5.

Use one of the faucet adapter kits that came with your Whirlpool portable dishwasher to modify the faucet where the machine will be used.

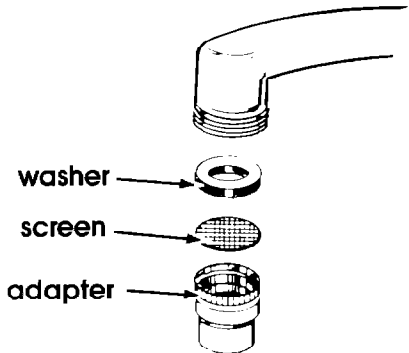


Remove the screen holder or aerator from the end of the faucet. For faucets with external threads, screw the adapter, Part No. 713750, directly onto the end of the faucet.

10.  
14.


15.

Numbers correspond to steps.

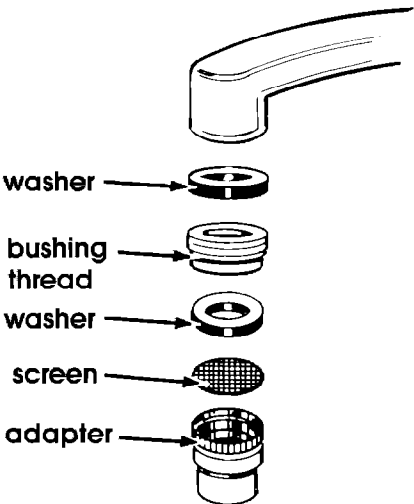


If your faucet has internal threads, first install the washer and threaded bushing, then the adapter screws onto the bushing.

For other type faucets, use the adapter kits specified:

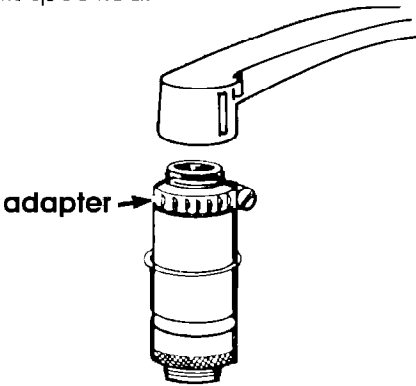

Faucets without threads – adapter kit, Part No. 3367946.

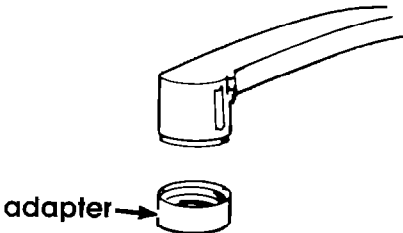


Faucets with 3/4-11 1/2 external thread – adapter kit, Part No. 715676.

**Note: If the washer will be used at a faucet equipped with a spray hose attachment, constant water pressure may affect the spray hose. To prevent potential problems, the spray hose should be permanently disconnected or replaced with a high pressure hose.**

6.

**CHECK THE ELECTRICAL REQUIREMENTS TO BE SURE YOU HAVE THE CORRECT ELECTRICAL SUPPLY AND RECOMMENDED GROUNDING METHOD.** Check the installation instructions to see that you have completed each step. If you have skipped a step, go back and complete that step before you continue with the following steps.

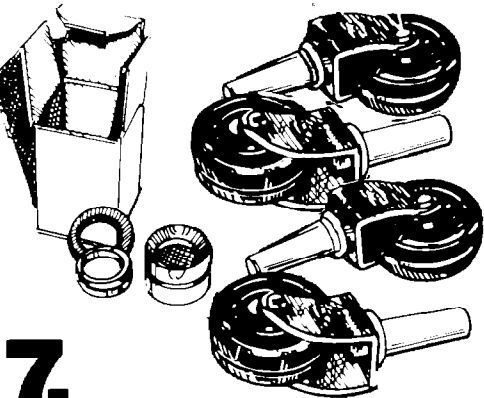


7.

Check that all the parts are now installed. If there is an extra part, go back through the steps to see which step was skipped.


8.

Check to make sure you have all your tools.

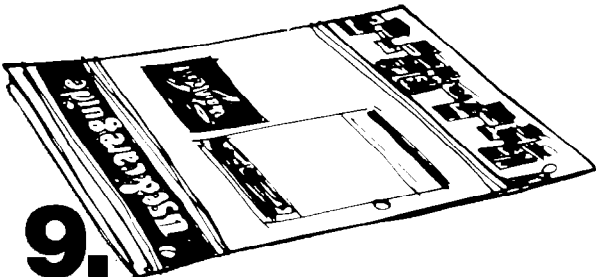

9.


Take a few minutes to read the Use and Care Guide so you can get the best use from your new portable dishwasher. Then move the dishwasher to the location where it will be used.

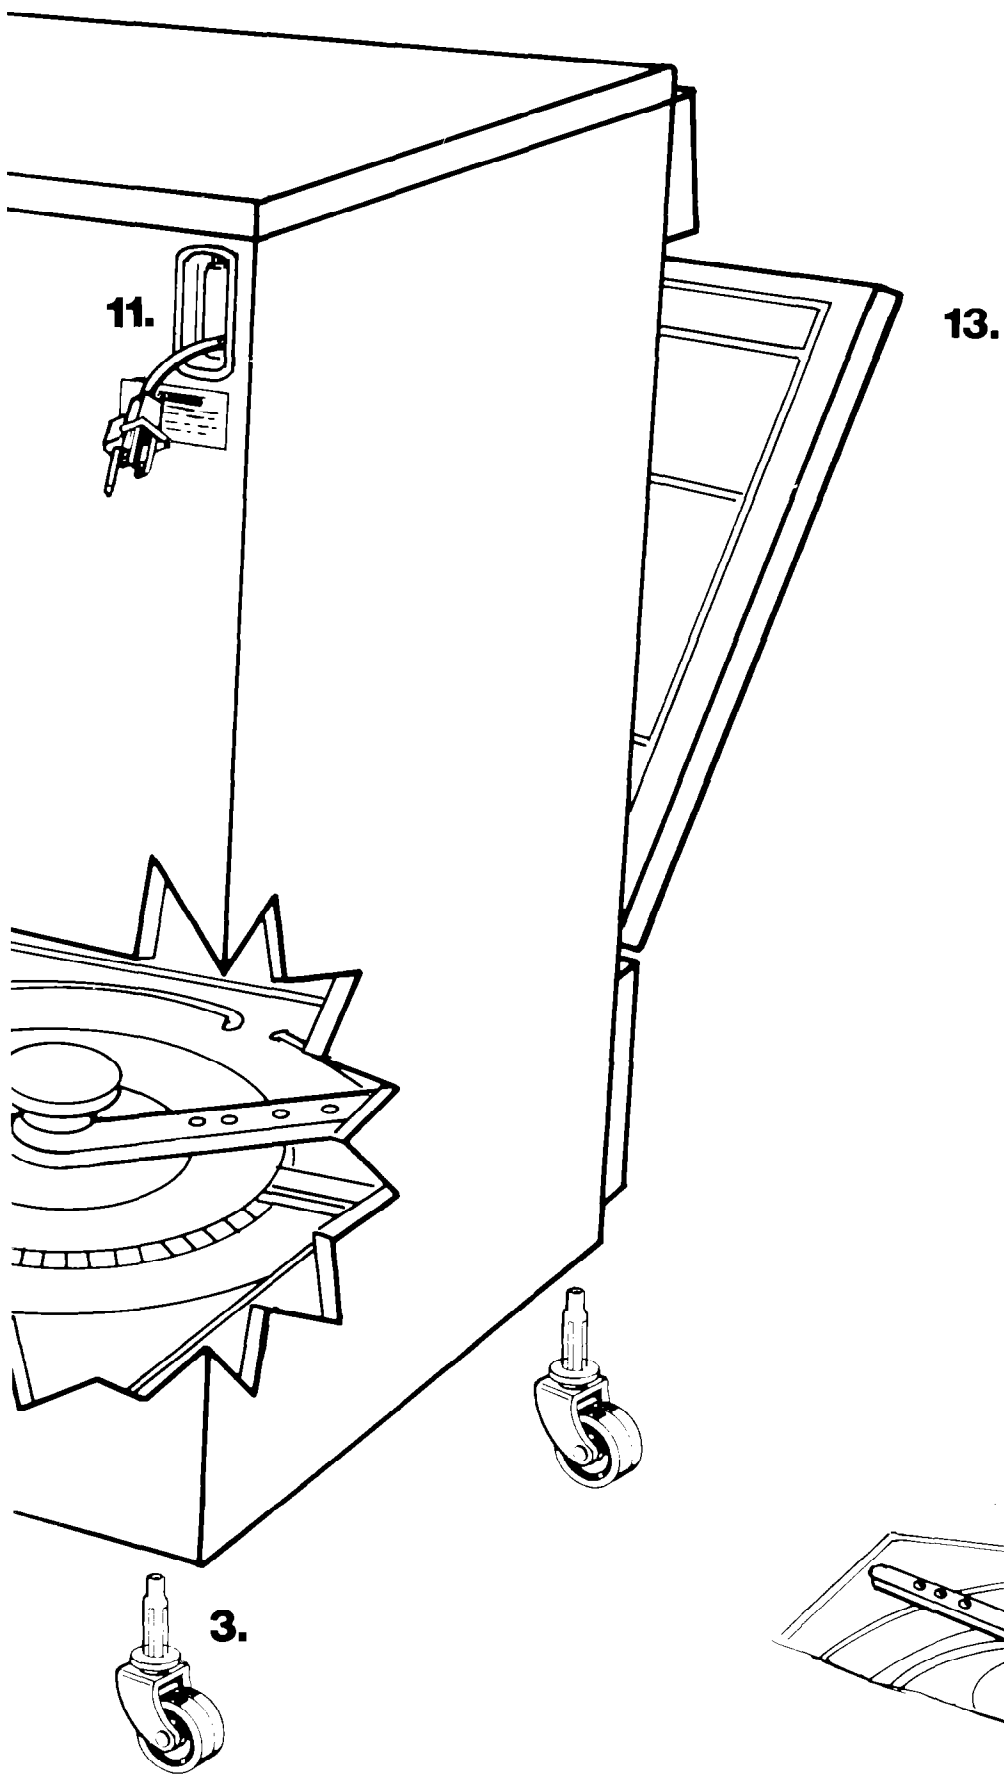

11.

13.

3.

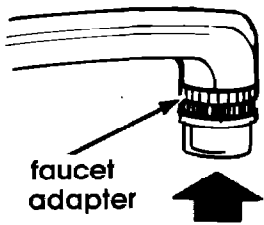


locking collar

bleeder button

10.

Turn on hot water until water is hot. Turn faucet off. Pull the inlet/drain hose from the storage compartment. Attach the hose connector to the faucet by pulling down on the locking collar while pushing the connector over the faucet adapter. It will snap into place. Release the locking collar.

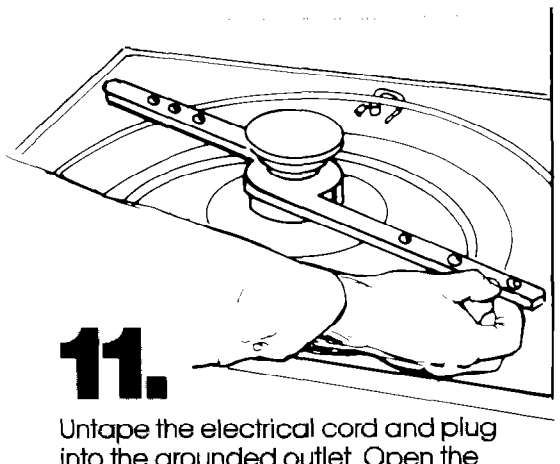

11.

Untape the electrical cord and plug into the grounded outlet. Open the dishwasher door and spin the spray arm to check for movement. Close the door.


12.

Slowly turn on hot water to fully open position. Start dishwasher.



13.

Check for leaks around the door, mounting gasket, and at the hose connections. Open door and check water level. Water should just cover the round heater element. Close door and allow dishwasher to complete one cycle.

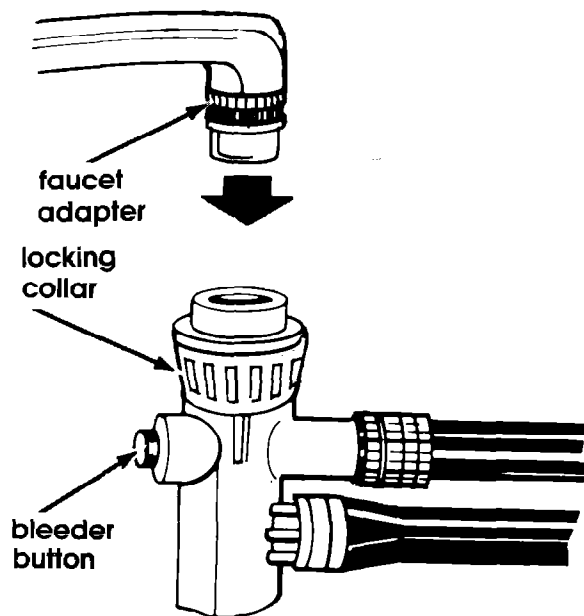

faucet adapter


locking collar

bleeder button

14.

When the cycle is completed, turn the water "OFF." Press the red button (bleeder button) on the connector to release water pressure. With one hand, move the locking collar downward while using the other hand to pull down on the connector. Turn the connector upside down to empty any water remaining inside the connector. Check for complete drain (no water should be visible).

**CAUTION:** Do not remove drain hose from faucet before faucet has been turned "OFF" and bleeder button pressed to release water pressure.

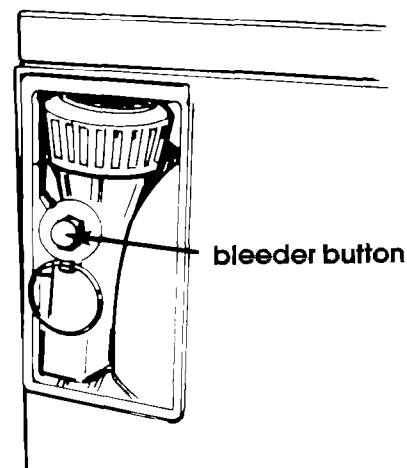

bleeder button

15.

Push hoses into storage compartment.


You have just successfully installed your new Whirlpool portable dishwasher. To make sure you get the most efficient use and greatest enjoyment from your new dishwasher, **Congratulations!**

read your Whirlpool Use and Care Guide. Keep these installation instructions nearby where you can refer to them. They'll make re-installing your Whirlpool dishwasher in another home as easy as your first installation.

## Permanent Installation

To convert a front loading portable dishwasher into a built-in model, you need the Conversion Kit No. 569056 available from your Whirlpool dealer.

10.  
14.

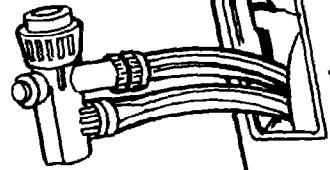



15.

11.



13

 Numbers  
correspond  
to steps.

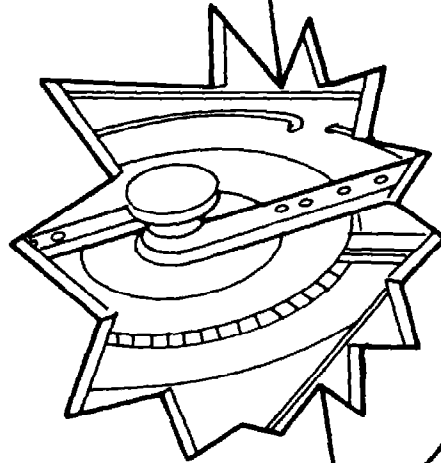


3.

## To change door panel color.

(For models so equipped)

**CAUTION:** Use care in changing panel. Cut metal edges may cause personal injury or damage to color panels.

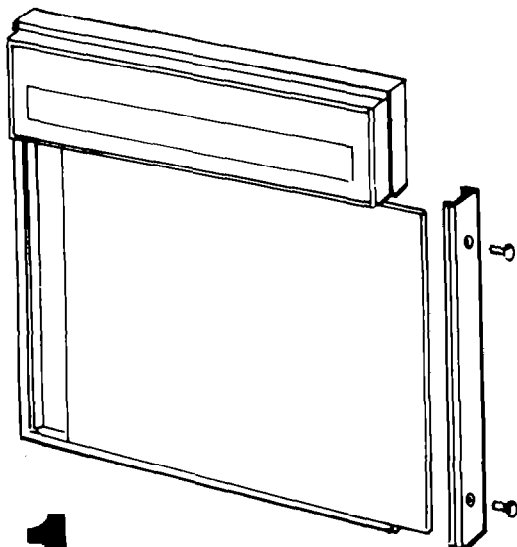


### 1.

Remove two screws securing one of the side trim pieces. Slide trim downward until upper edge is free of console or end cap. Lift off trim piece.

### 2.

Slide out color panels and corrugated spacer. Select panel you wish to have showing and place on top of panels. Slide color panels and spacer back into place.

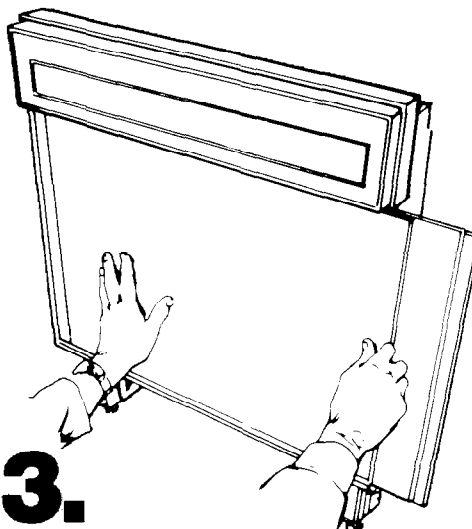

### 3.

Slide desired color panel into the lower door trim and the groove on the underside of console. Gently push on panel surface to fit panel under side trim edge.

### 4.

Slide trim piece against the console or end cap. Align side trim and mounting holes in door frame. Secure trim to door with screws.



## If the dishwasher is not operating properly...

Check these points:

- Is the door closed tightly and latched securely?
- Has the cycle been set correctly to start the dishwasher?
- Is the water turned on?
- Has a house fuse blown?
- Has electrical power been interrupted?

Note: If the motor has stopped because of overload, it will automatically reset itself within a few minutes. If after checking these points the dishwasher still does not run or complete a cycle, contact the cashier at your local exchange for service information.

## If you are transferred to the United States, and...

your Whirlpool portable dishwasher requires service: Contact an authorized Whirlpool dealer or service technician and provide them with proof of the purchase date of your portable dishwasher. Service within the warranty period will be supplied at **no charge**.

If you have any questions about operating or maintaining your Whirlpool portable dishwasher that are not covered in the Installation Instructions or Use and Care Guide, call the Whirlpool COOL-LINE® Dial just as you normally dial long distance (800) 253-1301 — the call is free.